

Annex D2 - Maintenance Schedule and spare parts for Hyundai Kona

Normal maintenance schedule - Except Europe

The following maintenance services must be performed to ensure good vehicle performance.

Keep receipts for all vehicle services to protect your warranty. Where both mileage and time are shown, the frequency of service is determined by whichever occurs first.

| <div>MAINTENANCE INTERVALS</div> <div>MAINTENANCE ITEM</div> | | Number of months or driving distance, whichever comes first | | | | | | | | |
|--|--|--|---|----|----|----|----|----|-----|-----|
| | | Months | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| | | Miles×1,000 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 |
| | | Km×1,000 | 15 | 30 | 45 | 60 | 75 | 90 | 105 | 120 |
| Cooling system | | Inspect "Coolant level adjustment and leak" every day | | | | | | | | |
| Coolant *1 | | At first, inspect 60,000 km (40,000 miles) or 48 months after that, inspect every 30,000 km (20,000 miles) or 24 months | | | | | | | | |
| Reduction gear fluid | | At first, replace 210,000 km (140,000 miles) or 120 months after that, replace every 30,000 km (20,000 miles) or 24 months*2 | | | | | | | | |
| Battery condition | | For Middle East | Inspect 10,000 km (6,200 miles) or 6 months | | | | | | | |
| | | Except Middle East | | | | | | | | |
| Brake lines, hoses and connections | | | | | | | | | | |
| Brake pedal | | | | | | | | | | |
| Parking brake | | | | | | | | | | |

| <div>MAINTENANCE INTERVALS</div> <div>MAINTENANCE ITEM</div> | | Number of months or driving distance, whichever comes first | | | | | | | | |
|--|--|---|----|----|----|----|----|----|-----|-----|
| | | Months | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| | | Miles×1,000 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 |
| | | Km×1,000 | 15 | 30 | 45 | 60 | 75 | 90 | 105 | 120 |
| Brake fluid | | | | R | | R | | R | | R |
| Brake discs and pads | | | | | | | | | | |
| Steering gear rack, linkage and boots | | | | | | | | | | |
| Driveshaft and boots | | | | | | | | | | |
| Tire (pressure & tread wear) | | | | | | | | | | |
| Front suspension ball joints | | | | | | | | | | |
| Bolt and nuts on chassis and body | | | | | | | | | | |
| Air conditioner refrigerant | | | | | | | | | | |
| Air conditioner compressor | | | | | | | | | | |
| Climate control air filter | | | R | R | R | R | R | R | R | R |

I : Inspect and if necessary, adjust, correct, clean or replace.

R : Replace or change.

*1 : When adding coolant, use only deionized water or soft water for your vehicle and never mix hard water in the coolant filled at